

iPhone 5c SIM Card Replacement

Written By: Dozuki System



INTRODUCTION

Use this guide to remove or replace your GSM iPhone's SIM card and tray.

TOOLS:	PARTS:
 SIM Card Eject Tool (1) 	 iPhone 5c Sim Card Tray (1)

Step 1 — SIM Card



- (i) Shut your phone down completely before removing the SIM card and tray.
- Insert a SIM card eject tool or a paperclip into the small hole in the SIM card tray.
- Press the SIM card eject tool inwards to eject the tray.
 - This may require a significant amount of force.

Step 2



- Remove the SIM Card tray assembly from the iPhone.
- During reassembly, ensure that the SIM card is in the proper orientation relative to the tray.

To reassemble your device, follow these instructions in reverse order.